



www.ototest.net

GÜNCEL TÜRKÇE OBD II ARIZA KODLARI TEKNİK BİLGİLER ARIZA TESPİT CİHAZLARI

SUZUKİ

92-95 SIDEKICK w/MULTI-POINT FUEL INJ		89-95 SIDEKICK & SAMURAI w/TBI FUEL INJ	
13	HO2S Circuit	14	ECT Sensor Circuit
14	ECT Sensor Circuit	15	ECT Sensor Circuit
15	ECT Sensor Circuit	21	TP Sensor Circuit
21	TP Sensor Circuit	41	Ignition Signal Circuit
22	TP Sensor Circuit	42	Crank Angle Sensor Circuit
23	IAT Sensor Circuit	44	Idle Switch Circuit
24	VSS Circuit	45	Idle Switch Circuit
25	Intake Air Sensor Circuit	51	EGR System & Recirculated Exhaust Gas Temperature Sensor
33	Air Flow Sensor Circuit	53	Ground Circuit
34	Air Flow Sensor Circuit	54	Fifth Switch Circuit
41	Ignition Signal Circuit	71	Test Switch Circuit
42	CMP Sensor Circuit		
44	Idle Switch Circuit		
45	Idle Switch Circuit		
51	EGR System & REGT Sensor Circuit		
52	Fuel Injector		

86-95 SWIFT w/TBI FUEL INJ		86-95 SWIFT w/MULTI-POINT FUEL INJ	
13	O2S Circuit	13	O2S Circuit
14	ECT Sensor Circuit	14	ECT Sensor Circuit
15	ECT Sensor Circuit	15	ECT Sensor Circuit
21	TP Sensor Circuit Signal Voltage High	21	TP Sensor Circuit
22	TP Sensor Circuit Signal Voltage Low	22	TP Sensor Circuit
23	IAT Sensor Circuit	24	Speed Sensor Circuit
24	VSS Circuit	33	Air Flow Sensor Circuit
25	IAT Sensor Circuit	34	Air Flow Sensor Circuit
31	Pressure Sensor Circuit	41	Ignition Signal Circuit
32	Pressure Sensor Circuit	42	Crank Angle Sensor Circuit
41	Ignition Fail-Safe Signal Circuit	51	EGR System & Recirculated Exhaust Gas Temperature Sensor Circuit
42	Crank Angle Sensor Circuit	52	Fuel Injector, California
51	EGR System & REGT Sensor Circuit		
ESTEEM		GRAND VITARA & VITARA	
P0106	MAP Circuit Performance Problem	P0101	MAF Circuit Performance Problem
P0107	MAP Circuit Voltage Low	P0102	MAF Circuit Voltage Low
P0108	MAP Circuit Voltage High	P0103	MAF Circuit Voltage High
P0111	IAT Circuit Range/Performance Problem	P0111	IAT Sensor Circuit Range/Performance
P0112	IAT Circuit Voltage Low	P0112	IAT Circuit Voltage Low
P0113	IAT Circuit Voltage High	P0113	IAT Circuit Voltage High
P0117	ECT Circuit Voltage Low	P0116	ECT Sensor Circuit Range/Performance
P0118	ECT Circuit Voltage High	P0117	ECT Circuit Voltage Low
P0121	TP Circuit Range/Performance Problem	P0118	ECT Circuit Voltage High
P0122	TP Circuit Voltage Low	P0121	TP Circuit Performance Problem

P0123	TP Circuit Voltage High	P0122	TP Circuit Voltage Low
P0125	Insufficient Coolant Temperature For Closed Loop Fuel Control	P0123	TP Circuit Voltage High
P0131	HO2S Circuit Voltage Low Sensor 1	P0125	Insufficient Coolant Temperature For Closed Loop Fuel Control
P0132	HO2S Circuit Voltage High Sensor 1	P0131	HO2S Circuit Voltage Low Bank 1 Sensor 1
P0133	HO2S Circuit Slow Response Sensor 1	P0132	HO2S Circuit Voltage High Bank 1 Sensor 1
P0134	HO2S Circuit No Activity Detected Sensor 1	P0133	HO2S Circuit Slow Response Bank 1 Sensor 1
P0135	HO2S Heater Circuit Malfunction Sensor 1	P0134	HO2S No Activity Bank 1 Sensor 1
P0136	HO2S Circuit Malfunction Sensor 2	P0135	HO2S Heater Circuit Malfunction Bank 1 Sensor 1
P0141	HO2S Heater Circuit Malfunction Sensor 2	P0136	HO2S Circuit Malfunction Bank 1 Sensor 2
P0171	Fuel System Too Lean	P0141	HO2S Heater Circuit Malfunction Bank 1 Sensor 2
P0172	Fuel System Too Rich	P0151	HO2S Circuit Low Voltage Bank 2 Sensor 1
P0300	Random Misfire Detected	P0152	HO2S Heater Circuit High Voltage Bank 2 Sensor 1
P0301–P0304	Misfire Cylinders 1–4	P0153	HO2S Circuit Slow Response Bank 2 Sensor 1
P0335	CKP Sensor Circuit Malfunction	P0154	HO2S No Activity Detected Bank 2 Sensor 1
P0340	CMP Sensor Circuit Malfunction	P0155	HO2S Heater Circuit Malfunction Bank 2 Sensor 1
P0400	EGR Flow Malfunction	P0156	HO2S Circuit Malfunction Bank 2 Sensor 1
P0420	Catalyst System Efficiency Below Threshold	P0161	HO2S Heater Circuit Malfunction Bank 2 Sensor 2
P0440	EVAP System Malfunction	P0171	Fuel System Too Lean (Bank 1)
P0443	EVAP System Purge Control Valve Circuit Malfunction	P0172	Fuel System Too Rich (Bank 1)
P0450	EVAP System Pressure Sensor Malfunction	P0174	Fuel System Too Lean (Bank 2)

P0451	EVAP System Pressure Sensor Performance	P0175	Fuel System Too Rich (Bank 2)
P0455	EVAP System Leak Detected (Gross Leak)	P0300	Random Misfire Detected
P0461	Fuel Level Sensor Circuit Performance Problem	P0301– P0306	Misfire Cylinders 1–6
P0463	Fuel Level Sensor Circuit Voltage High	P0335	CKP Sensor Circuit Malfunction
P0480	Radiator Cooling Fan Control System Malfunction	P0340	CMP Sensor Circuit Malfunction
P0500	VSS Malfunction	P0400	EGR Flow Malfunction
P0505	ISC System Malfunction	P0420	Catalyst System Efficiency Below Threshold (Bank 1)
P0506	ISC System RPM Lower Than Expected	P0430	Catalyst System Efficiency Below Threshold (Bank 2)
P0507	ISC System RPM Higher Than Expected	P0440	EVAP II System Malfunction
P0510	CTP Switch Malfunction	P0450	EVAP II System Pressure Sensor Malfunction
P0601	Internal Control Module Memory Checksum Error	P0451	EVAP Pressure Sensor Range/Performance
P0603	Internal Control Module KAM Error	P0455	EVAP Gross Leak Detected
P0705	Transaxle Range Sensor Switch Circuit Malfunction	P0461	Fuel Level Sensor Circuit Performance
P0715	Input Speed Sensor Circuit Malfunction	P0463	Fuel Level Sensor Circuit Voltage High
P0720	Output Speed Sensor Circuit Malfunction	P0500	VSS Malfunction
P0725	Engine Speed Input Circuit Malfunction	P0505	IAC System Malfunction
P0741	TCC Solenoid Performance Or Stuck Off	P0601	Internal Control Module Memory Checksum Error
P0743	TCC Solenoid Electrical	P1408	MDP Sensor Circuit Malfunction
P0745	Pressure Control Solenoid Malfunction	P1410	EVAP II Fuel Tank Pressure Control System Malfunction
P0751	Shift Solenoid “A” (No. 1) Performance Or Stuck Off	P1450	BARO Sensor Circuit Malfunction

P0753	Shift Solenoid "A" (No. 1) Electrical	P1451	BARO Circuit Performance Problem
P0756	Shift Solenoid "B" (No. 2) Performance Or Stuck Off	P1500	Engine Starter Signal Circuit Malfunction
P0758	Shift Solenoid "B" (No. 2) Electrical	P1510	ECM Back-Up Power Supply Malfunction
P1410	Fuel Tank Pressure Control System Malfunction		
P1450	BARO Sensor Voltage High/Low		
P1451	BARO Sensor Performance Problem		
P1460	Radiator Cooling Fan Control System Malfunction		
P1500	Engine Starter Signal Circuit Malfunction		
P1510	ECM Back-Up Power Supply Malfunction		
P1530	Ignition Timing Adjustment Switch Circuit Malfunction		
P1600	Serial Communication Problem Between ECM & TCM		
P1700	TP Signal Input Malfunction		
P1705	ECT Signal Input Malfunction		
P1717	A/T Drive Range Signal Circuit Malfunction		
P1895	TCM To ECM Torque Reduction Circuit Malfunction		
96-98 SIDEKICK & X-90 1.6L ENGINE		96-98 SIDEKICK 1.8L ENGINE	
P0101	MAF Circuit Performance Problem	P0101	MAF Circuit Performance Problem
P0102	MAF Circuit Voltage Low	P0102	MAF Circuit Voltage Low
P0103	MAF Circuit Voltage High	P0103	MAF Voltage High
P0112	IAT Circuit Voltage Low	P0111	IAT Circuit Range/Performance
P0113	IAT Circuit Voltage High	P0112	IAT Circuit Voltage Low
P0117	ECT Circuit Voltage Low	P0113	IAT Circuit Voltage High

P0118	ECT Circuit Voltage High	P0117	ECT Circuit Voltage Low
P0121	TP Circuit Performance Problem	P0118	ECT Circuit Voltage High
P0122	TP Circuit Voltage Low	P0121	TP Sensor Circuit Performance Problem
P0123	TP Circuit Voltage High	P0122	TP Sensor Circuit Voltage Low
P0125	Insufficient Coolant Temperature For Closed Loop Fuel Control	P0123	TP Sensor Voltage High
P0131	HO2S Circuit Voltage Low	P0125	Insufficient Coolant Temperature For Closed Loop Fuel Control
P0132	HO2S Circuit Voltage High	P0131	HO2S 1 Circuit Voltage Low
P0133	HO2S Circuit Slow Response	P0132	HO2S 1 Circuit Voltage High
P0134	HO2S No Activity	P0133	HO2S 1 Circuit Slow Response
P0135	HO2S Heater Circuit Malfunction	P0134	HO2S 1 Circuit No Activity
P0136	HO2S Circuit Malfunction	P0135	HO2S 1 Heater Circuit Malfunction
P0141	HO2S Heater Circuit Malfunction	P0136	HO2S 2 Circuit Malfunction
P0171	Fuel System Too Lean	P0141	HO2S 2 Circuit Malfunction
P0172	Fuel System Too Rich	P0171	Fuel System Too Lean
P0300	Random Misfire Detected	P0172	Fuel System Too Rich
P0301–P0304	Misfire Cylinders 1–4	P0300	Random Misfire
P0335	CKP Sensor Circuit Malfunction	P0301–P0304	Misfire Cylinders 1–4
P0340	CMP Sensor Circuit Malfunction	P0335	CKP Sensor Circuit Malfunction
P0400	EGR Flow Malfunction	P0340	CMP Sensor Circuit Malfunction
P0420	Catalyst System Efficiency Below Threshold	P0400	EGR Flow Malfunction
P0440	EVAP II System Malfunction	P0420	Catalyst System Efficiency Below Threshold
P0443	EVAP I System Improper Purge Flow	P0440	EVAP System Malfunction

P0450	EVAP II System Pressure Sensor Malfunction	P0443	EVAP System Improper Purge Flow
P0461	Fuel Level Sensor Circuit Performance	P0450	EVAP Pressure Sensor Malfunction
P0463	Fuel Level Sensor Circuit Voltage High	P0451	EVAP Pressure Sensor Range/Performance
P0500	VSS Malfunction	P0455	EVAP Leak Detected (Gross Leak)
P0505	IAC System Malfunction	P0461	Fuel Level Sensor Circuit Performance
P0510	CTP Switch Malfunction	P0463	Fuel Level Sensor Circuit Voltage High
P0601	Internal Control Module Memory Checksum Error	P0500	VSS Malfunction
P0603	Internal Control Module KAM Error	P0505	IAC System Malfunction
P0705 (34)	Transmission Range Switch Circuit Malfunction	P0601	Internal Control Module Memory Checksum Error
P0720 (31)	OSS Malfunction	P0603	Internal Control Module KAM Error
P0725 (52)	Engine Speed Input Circuit Malfunction	P0705 (34)	Transmission Range Switch Circuit Malfunction
P0741 (29)	TCC Solenoid Performance Or Stuck Off	P0720 (31)	OSS Circuit Malfunction
P0743 (25 Or 26)	TCC Lock-Up Solenoid Electrical	P0725 (52)	Engine Speed Input Circuit Malfunction
P0751 (27)	Shift Solenoid "A" (No. 1) Performance Or Stuck Off	P0741 (29)	TCC Lock-Up Solenoid Performance Or Stuck Off
P0753 (21 Or 22)	Shift Solenoid "A" (No. 1) Electrical	P0743 (25 Or 26)	TCC Lock-Up Solenoid Electrical
P0756 (28)	Shift Solenoid "B" (No. 2) Performance Or Stuck Off	P0751 (27)	Shift Solenoid "A" (No. 1) Performance Or Stuck Off
P0758 (23 Or 24)	Shift Solenoid "B" (No. 2) Electrical	P0753 (21 Or 22)	Shift Solenoid "A" (No. 1) Electrical
P0771 (29)	TCC Solenoid Performance Or Stuck Off	P0756 (28)	Shift Solenoid "B" (No. 2) Performance Or Stuck Off
P0773 (25 Or 26)	TCC Lock-Up Solenoid Electrical	P0758 (23 Or 24)	Shift Solenoid "A" (No. 1) Electrical
P1408	MDP Sensor Circuit	P0771 (29)	TCC Lock-Up Solenoid

	Malfunction		Performance Or Stuck Off
P1410	EVAP II Fuel Tank Pressure Control System Malfunction	P0773 (25 Or 26)	TCC Lock-Up Solenoid Electrical
P1450	BARO Sensor Circuit Malfunction	P1408	MDP Sensor Circuit Malfunction
P1451	BARO Circuit Performance Problem	P1410	Fuel Tank Pressure Control System Malfunction
P1500	Engine Starter Signal Circuit Malfunction	P1450	BARO Sensor Circuit Malfunction
P1510	ECM Back-Up Power Supply Malfunction	P1451	BARO Sensor Circuit Performance Problem
P1530	Ignition Timing Adjustment Switch Circuit Malfunction	P1500	Engine Starter Signal Circuit Malfunction
P1600	Serial Communication Problem Between ECM & TCM	P1510	ECM Back-Up Power Supply Malfunction
P1700 (32 Or 33)	TP Signal Input Malfunction	P1530	Ignition Timing Adjustment Switch Circuit Malfunction
P1705 (34)	ECT Signal Input Malfunction	P1600	Serial Communication Problem Between ECM & TCM
P1710	Back-Up Signal For Speed Sensor Circuit Malfunction	P1700 (32 Or 33)	TP Signal Input Malfunction
P1715	PNP Switch Circuit Malfunction	P1705 (51)	ECT Signal Input Malfunction
P1875	4WD Low Switch Circuit Malfunction	P1710 (35)	Back-Up Signal For Speed Sensor Circuit Malfunction
		P1875 (37)	4WD Low Switch Circuit Malfunction
96-00 SWIFT			
P0106	MAP Circuit Performance Problem		
P0107	MAP Circuit Voltage Low		
P0108	MAP Circuit Voltage High		
P0111	IAT Circuit Range/Performance Problem		
P0112	IAT Circuit Voltage Low		
P0113	IAT Circuit Voltage High		

P0116	Engine Coolant Temperature Circuit Range/Performance Problem		
P0117	ECT Circuit Voltage Low		
P0118	ECT Circuit Voltage High		
P0121	TP Sensor Circuit Range/Performance Problem		
P0122	TP Sensor Circuit Voltage Low		
P0123	TP Sensor Circuit Voltage High		
P0125	Insufficient Coolant Temperature For Closed Loop Fuel Control		
P0131	HO2S 1 Circuit Voltage Low		
P0132	HO2S 1 Circuit Voltage High		
P0133	HO2S 1 Circuit Slow Response		
P0134	HO2S 1 Circuit No Activity Detected		
P0135	HO2S 1 Heater Circuit Malfunction		
P0136	HO2S 2 Circuit Malfunction		
P0141	HO2S 2 Heater Circuit Malfunction		
P0171	Fuel System Too Lean		
P0172	Fuel System Too Rich		
P0300	Misfire Detected		
P0301– P0304	Misfire Cylinders 1–4		
P0335	CKP Sensor Circuit Malfunction		
P0340	CMP Sensor Circuit Malfunction		
P0400	EGR Flow Malfunction		
P0420	Catalyst System Efficiency Below Threshold		
P0440	EVAP System Malfunction/Gross Leak		

	Detected		
P0443	EVAP System Purge Control Valve Circuit Malfunction		
P0450	EVAP System Pressure Sensor Malfunction		
P0451	EVAP System Pressure Sensor Performance		
P0455	EVAP System Malfunction, Large Leak Detected		
P0461	Fuel Level Sensor Circuit Performance Problem		
P0463	Fuel Level Sensor Circuit Voltage High		
P0480	Radiator Fan Control System Malfunction		
P0500	VSS Malfunction		
P0505	ISC System Malfunction		
P0506	ISC System RPM Lower Than Expected		
P0507	ISC System RPM Higher Than Expected		
P0510	CTP Switch Malfunction		
P0601	Internal Control Module Memory Checksum Error		
P0603	Internal Control Module KAM Error		
P0705	Transmission Range Sensor Circuit Malfunction (A/T)		
P0720	OSS Circuit Malfunction (A/T)		
P0751	Shift Solenoid "A" (No. 1) Performance Or Stuck Open		
P0753	Shift Solenoid "A" (No. 1) Electrical (A/T)		
P0756	Shift Solenoid "B" (No. 2) Performance Or Stuck Open		
P0758	Shift Solenoid "B" (No. 2) Electrical (A/T)		

P1250	EFE Heater Circuit Malfunction		
P1410	Fuel Tank Pressure Control System Malfunction		
P1450	BARO Sensor Voltage High/Low		
P1451	BARO Sensor Performance Problem		
P1460	Radiator Cooling Fan Control System Malfunction		
P1500	Engine Starter Signal Circuit Malfunction		
P1510	ECM Back-Up Power Supply Malfunction		
P1530	Ignition Timing Adjustment Switch Circuit Malfunction		