



www.ototest.net

**GÜNCEL TÜRKÇE OBD II ARIZA KODLARI
TEKNİK BİLGİLER
ARIZA TESPİT CİHAZLARI**

VOLKSWAGEN AUDİ SKODA SEAT

P0010 -A- Camshaft Pos. Actuator Circ. Bank 1 Malfunction 16394
P0020 -A- Camshaft Pos. Actuator Circ. Bank 2 Malfunction 16395
P0065 Air Assisted Injector Control Range/Performance 16449
P0066 Air Assisted Injector Control Low Input/Short to ground 16450
P0067 Air Assisted Injector Control Input/Short to B+ 16451
P0101 Mass or Volume Air Flow Circ Range/Performance 16485
P0102 Mass or Volume Air Flow Circ Low Input 16486
P0103 Mass or Volume Air Flow Circ High Input 16487
P0105 Manifold Abs.Pressure or Bar.Pressure Voltage supply 16489
P0106 Manifold Abs.Pressure or Bar.Pressure Range/Performance 16490
P0107 Manifold Abs.Pressure or Bar.Pressure Low Input 16491
P0108 Manifold Abs.Pressure or Bar.Pressure High Input 16492
P0112 Intake Air Temp.Circ Low Input 16496
P0113 Intake Air Temp.Circ High Input 16497
P0116 Engine Coolant Temp.Circ Range/Performance 16500
P0117 Engine Coolant Temp.Circ Low Input 16501
P0118 Engine Coolant Temp.Circ High Input 16502
P0120 Throttle/Pedal Pos.Sensor A Circ Malfunction 16504
P0121 Throttle/Pedal Pos.Sensor A Circ Range/Performance 16505
P0122 Throttle/Pedal Pos.Sensor A Circ Low Input 16506
P0123 Throttle/Pedal Pos.Sensor A Circ High Input 16507
P0125 Insufficient Coolant Temp.for Closed Loop Fuel Control 16509
P0128 Coolant Thermostat/Valve Temperature below control range 16512
P0130 O2 Sensor Circ.,Bank1-Sensor1 Malfunction 16514
P0131 O2 Sensor Circ.,Bank1-Sensor1 Low Voltage 16515
P0132 O2 Sensor Circ.,Bank1-Sensor1 High Voltage 16516
P0133 O2 Sensor Circ.,Bank1-Sensor1 Slow Response 16517
P0134 O2 Sensor Circ.,Bank1-Sensor1 No Activity Detected 16518
P0135 O2 Sensor Heater Circ.,Bank1-Sensor1 Malfunction 16519
P0136 O2 Sensor Circ.,Bank1-Sensor2 Malfunction 16520
P0137 O2 Sensor Circ.,Bank1-Sensor2 Low Voltage 16521
P0138 O2 Sensor Circ.,Bank1-Sensor2 High Voltage 16522
P0139 O2 Sensor Circ.,Bank1-Sensor2 Slow Response 16523
P0140 O2 Sensor Circ.,Bank1-Sensor2 No Activity Detected 16524
P0141 O2 Sensor Heater Circ.,Bank1-Sensor2 Malfunction 16525
P0150 O2 Sensor Circ.,Bank2-Sensor1 Malfunction 16534
P0151 O2 Sensor Circ.,Bank2-Sensor1 Low Voltage 16535
P0152 O2 Sensor Circ.,Bank2-Sensor1 High Voltage 16536
P0153 O2 Sensor Circ.,Bank2-Sensor1 Slow Response 16537
P0154 O2 Sensor Circ.,Bank2-Sensor1 No Activity Detected 16538
P0155 O2 Sensor Heater Circ.,Bank2-Sensor1 Malfunction 16539
P0156 O2 Sensor Circ.,Bank2-Sensor2 Malfunction 16540
P0157 O2 Sensor Circ.,Bank2-Sensor2 Low Voltage 16541
P0158 O2 Sensor Circ.,Bank2-Sensor2 High Voltage 16542
P0159 O2 Sensor Circ.,Bank2-Sensor2 Slow Response 16543

P0160 O2 Sensor Circ.,Bank2-Sensor2 No Activity Detected 16544
P0161 O2 Sensor Heater Circ.,Bank2-Sensor2 Malfunction 16545
P0170 Fuel Trim,Bank1 Malfunction 16554
P0171 Fuel Trim,Bank1 System too Lean 16555
P0172 Fuel Trim,Bank1 System too Rich 16556
P0173 Fuel Trim,Bank2 Malfunction 16557
P0174 Fuel Trim,Bank2 System too Lean 16558
P0175 Fuel Trim,Bank2 System too Rich 16559
P0182 Fuel temperature sender-G81 Short to ground 16566
P0183 Fuel temperature sender-G81 Interruption/Short to B+ 16567
P0197 Engine Oil Temperature Circuit Low Input 16581
P0198 Engine Oil Temperature Circuit High Input 16582

P0201 Cyl.1, Injector Circuit Fault in electrical circuit 16585
P0202 Cyl.2, Injector Circuit Fault in electrical circuit 16586
P0203 Cyl.3, Injector Circuit Fault in electrical circuit 16587
P0204 Cyl.4, Injector Circuit Fault in electrical circuit 16588
P0205 Cyl.5 Injector Circuit Fault in electrical circuit 16589
P0206 Cyl.6 Injector Circuit Fault in electrical circuit 16590
P0207 Cyl.7 Injector Circuit Fault in electrical circuit 16591
P0208 Cyl.8 Injector Circuit Fault in electrical circuit 16592
P0215 Engine Shut-Off Solenoid Malfunction 16599
P0216 Injector/Injection Timing Control Malfunction 16600
P0219 Engine Overspeed Condition 16603
P0221 Throttle Pos. Sensor -B- Circuit Range/Performance 16605
P0222 Throttle Pos. Sensor -B- Circuit Low Input 16606
P0223 Throttle Pos. Sensor -B- Circuit High Input 16607
P0225 Throttle Pos. Sensor -C- Circuit Voltage supply 16609
P0226 Throttle Pos. Sensor -C- Circuit Range/Performance 16610
P0227 Throttle Pos. Sensor -C- Circuit Low Input 16611
P0228 Throttle Pos. Sensor -C- Circuit Hight Input 16612
P0230 Fuel Pump Primary Circuit Fault in electrical circuit 16614
P0234 Turbocharger Overboost Condition Control limit exceeded 16618
P0235 Turbocharger Boost Sensor (A) Circ Control limit not reached 16619
P0236 Turbocharger Boost Sensor (A) Circ Range/Performance 16620
P0237 Turbocharger Boost Sensor (A) Circ Low Input 16621
P0238 Turbocharger Boost Sensor (A) Circ High Input 16622
P0243 Turbocharger Wastegate Solenoid (A) Open/Short Circuit to Ground 16627
P0245 Turbocharger Wastegate Solenoid (A) Low Input/Short to ground 16629
P0246 Turbocharger Wastegate Solenoid (A) High Input/Short to B+ 16630
P0252 Injection Pump Metering Control (A) Range/Performance 16636
P0261 Cyl.1 Injector Circuit Low Input/Short to ground 16645
P0262 Cyl.1 Injector Circuit High Input/Short to B+ 16646
P0264 Cyl.2 Injector Circuit Low Input/Short to ground 16648
P0265 Cyl.2 Injector Circuit High Input/Short to B+ 16649
P0267 Cyl.3 Injector Circuit Low Input/Short to ground 16651
P0268 Cyl.3 Injector Circuit High Input/Short to B+ 16652
P0270 Cyl.4 Injector Circuit Low Input/Short to ground 16654
P0271 Cyl.4 Injector Circuit High Input/Short to B+ 16655
P0273 Cyl.5 Injector Circuit Low Input/Short to ground 16657
P0274 Cyl.5 Injector Circuit High Input/Short to B+ 16658
P0276 Cyl.6 Injector Circuit Low Input/Short to ground 16660
P0277 Cyl.6 Injector Circuit High Input/Short to B+ 16661
P0279 Cyl.7 Injector Circuit Low Input/Short to ground 16663
P0280 Cyl.7 Injector Circuit High Input/Short to B+ 16664
P0282 Cyl.8 Injector Circuit Low Input/Short to ground 16666
P0283 Cyl.8 Injector Circuit High Input/Short to B+ 16667

P0300 Random/Multiple Cylinder Misfire Detected 16684
P0301 Cyl.1 Misfire Detected 16685
P0302 Cyl.2 Misfire Detected 16686

P0303 Cyl.3 Misfire Detected 16687
P0304 Cyl.4 Misfire Detected 16688
P0305 Cyl.5 Misfire Detected 16689
P0306 Cyl.6 Misfire Detected 16690
P0307 Cyl.7 Misfire Detected 16691
P0308 Cyl.8 Misfire Detected 16692
P0313 Misfire Detected Low Fuel Level 16697
P0314 Single Cylinder Misfire 16698
P0321 Ign./Distributor Eng.Speed Inp.Circ Range/Performance 16705
P0322 Ign./Distributor Eng.Speed Inp.Circ No Signal 16706
P0325 Knock Sensor 1 Circuit Electrical Fault in Circuit 16709
P0326 Knock Sensor 1 Circuit Range/Performance 16710
P0327 Knock Sensor 1 Circ Low Input 16711
P0328 Knock Sensor 1 Circ High Input 16712
P0332 Knock Sensor 2 Circ Low Input 16716
P0333 Knock Sensor 2 Circ High Input 16717
P0335 Crankshaft Pos. Sensor (A) Circ Malfunction 16719
P0336 Crankshaft Pos. Sensor (A) Circ Range/Performance/Missing tooth 16720
P0337 Crankshaft Pos.Sensor (A) Circ Low Input 16721
P0340 Camshaft Pos. Sensor (A) Circ Incorrect allocation 16724
P0341 Camshaft Pos.Sensor Circ Range/Performance 16725
P0342 Camshaft Pos.Sensor Circ Low Input 16726
P0343 Camshaft Pos.Sensor Circ High Input 16727
P0351 Ignition Coil (A) Cyl.1 Prim./Sec. Circ Malfunction 16735
P0352 Ignition Coil (B) Cyl.2 Prim./Sec. Circ Malfunction 16736
P0353 Ignition Coil (C) Cyl.3 Prim./Sec. Circ Malfunction 16737
P0354 Ignition Coil (D) Cyl.4 Prim./Sec. Circ Malfunction 16738
P0355 Ignition Coil (E) Cyl.5 Prim./Sec. Circ Malfunction 16739
P0356 Ignition Coil (F) Cyl.6 Prim./Sec. Circ Malfunction 16740
P0357 Ignition Coil (G) Cyl.7 Prim./Sec. Circ Malfunction 16741
P0358 Ignition Coil (H) Cyl.8 Prim./Sec. Circ Malfunction 16742
P0380 Glow Plug/Heater Circuit (A) Electrical Fault in Circuit 16764

P0400 Exhaust Gas Recirc.Flow Malfunction 16784
P0401 Exhaust Gas Recirc.Flow Insufficient Detected 16785
P0402 Exhaust Gas Recirc.Flow Excessive Detected 16786
P0403 Exhaust Gas Recirc. Contr. Circ Malfunction 16787
P0404 Exhaust Gas Recirc. Contr. Circ Range/Performance 16788
P0405 Exhaust Gas Recirc. Sensor (A) Circ Low Input 16789
P0406 Exhaust Gas Recirc. Sensor (A) Circ High Input 16790
P0407 Exhaust Gas Recirc. Sensor (B) Circ Low Input 16791
P0408 Exhaust Gas Recirc. Sensor (B) Circ High Input 16792
P0410 Sec.Air Inj.Sys Malfunction 16794
P0411 Sec.Air Inj.Sys. Incorrect Flow Detected 16795
P0412 Sec.Air Inj.Sys.Switching Valve A Circ Malfunction 16796
P0418 Sec. Air Inj. Sys. Relay (A) Contr. Circ Malfunction 16802
P0420 Catalyst System,Bank1 Efficiency Below Threshold 16804
P0422 Main Catalyst,Bank1 Below Threshold 16806
P0427 Catalyst Temperature Sensor, Bank 1 Low Input/Short to ground 16811
P0428 Catalyst Temperature Sensor, Bank 1 High Input/Open/Short Circuit to B+ 16812
P0432 Main Catalyst,Bank2 Efficiency Below Threshold 16816
P0436 Catalyst Temperature Sensor, Bank 2 Range/Performance 16820
P0437 Catalyst Temperature Sensor, Bank 2 Low Input/Short to ground 16821
P0438 Catalyst Temperature Sensor, Bank 2 High Input/Open/Short Circuit to B+ 16822
P0440 EVAP Emission Contr.Sys. Malfunction 16824
P0441 EVAP Emission Contr.Sys.Incorrect Purge Flow 16825
P0442 EVAP Emission Contr.Sys.(Small Leak) Leak Detected 16826
P0443 EVAP Emiss. Contr. Sys. Purge Valve Circ Electrical Fault in Circuit 16827
P0452 EVAP Emission Contr.Sys.Press.Sensor Low Input 16836

P0453 EVAP Emission Contr.Sys.Press.Sensor High Input 16837
P0455 EVAP Emission Contr.Sys.(Gross Leak) Leak Detected 16839
P0461 Fuel Level Sensor Circ Range/Performance 16845
P0462 Fuel Level Sensor Circuit Low Input 16846
P0463 Fuel Level Sensor Circuit High Input 16847

P0501 Vehicle Speed Sensor Range/Performance 16885
P0503 Vehicle Speed Sensor Intermittent/Erratic/High Input 16887
P0505 Idle Control System Malfunction 16889
P0506 Idle Control System RPM Lower than Expected 16890
P0507 Idle Control System Higher than Expected 16891
P0510 Closed Throttle Pos.Switch Malfunction 16894
P0531 A/C Refrigerant Pressure Sensor Circuit Range/Performance 16915
P0532 A/C Refrigerant Pressure Sensor Circuit Low Input 16916
P0533 A/C Refrigerant Pressure Sensor Circuit High Input 16917
P0551 Power Steering Pressure Sensor Circuit Range/Performance 16935
P0560 System Voltage Malfunction 16944
P0562 System Voltage Low Voltage 16946
P0563 System Voltage High Voltage 16947
P0568 Cruise Control Set Signal Incorrect Signal 16952
P0571 Cruise/Brake Switch (A) Circ Malfunction 16955

P0600 Serial Comm. Link (Data Bus) Message Missing 16984
P0601 Internal Contr.Module Memory Check Sum Error 16985
P0602 Control Module Programming Error/Malfunction 16986
P0603 Internal Contr.Module (KAM) Error 16987
P0604 Internal Contr.Module Random Access Memory (RAM) Error 16988
P0605 Internal Contr.Module ROM Test Error 16989
P0606 ECM/PCM Processor 16990
P0642 Knock Control Control Module Malfunction 17026
P0645 A/C Clutch Relay Control Circuit 17029
P0650 MIL Control Circuit Electrical Fault in Circuit 17034
P0654 Engine RPM Output Circuit Electrical Fault in Circuit 17038
P0656 Fuel Level Output Circuit Electrical Fault in Circuit 17040

P0700 Transm.Contr.System Malfunction 17084
P0702 Transm.Contr.System Electrical 17086
P0703 Torque Converter/Brake Switch B Circ Malfunction 17087
P0705 Transm.Range Sensor Circ.(PRNDL Inp.) Malfunction 17089
P0706 Transm.Range Sensor Circ Range/Performance 17090
P0707 Transm.Range Sensor Circ Low Input 17091
P0708 Transm.Range Sensor Circ High Input 17092
P0710 Transm.Fluid Temp.Sensor Circ. Malfunction 17094
P0711 Transm.Fluid Temp.Sensor Circ. Range/Performance 17095
P0712 Transm.Fluid Temp.Sensor Circ. Low Input 17096
P0713 Transm.Fluid Temp.Sensor Circ. High Input 17097
P0715 Input Turbine/Speed Sensor Circ. Malfunction 17099
P0716 Input Turbine/Speed Sensor Circ. Range/Performance 17100
P0717 Input Turbine/Speed Sensor Circ. No Signal 17101
P0721 Output Speed Sensor Circ Range/Performance 17105
P0722 Output Speed Sensor Circ No Signal 17106
P0725 Engine Speed Inp.Circ. Malfunction 17109
P0726 Engine Speed Inp.Circ. Range/Performance 17110
P0727 Engine Speed Inp.Circ. No Signal 17111
P0730 Gear Incorrect Ratio 17114
P0731 Gear 1 Incorrect Ratio 17115
P0732 Gear 2 Incorrect Ratio 17116
P0733 Gear 3 Incorrect Ratio 17117
P0734 Gear 4 Incorrect Ratio 17118
P0735 Gear 5 Incorrect Ratio 17119
P0740 Torque Converter Clutch Circ Malfunction 17124

P0741 Torque Converter Clutch Circ Performance or Stuck Off 17125
P0748 Pressure Contr.Solenoid Electrical 17132
P0750 Shift Solenoid A malfunction 17134
P0751 Shift Solenoid A Performance or Stuck Off 17135
P0752 Shift Solenoid A Stuck On 17136
P0753 Shift Solenoid A Electrical 17137
P0756 Shift Solenoid B Performance or Stuck Off 17140
P0757 Shift Solenoid B Stuck On 17141
P0758 Shift Solenoid B Electrical 17142
P0761 Shift Solenoid C Performance or Stuck Off 17145
P0762 Shift Solenoid C Stuck On 17146
P0763 Shift Solenoid C Electrical 17147
P0768 Shift Solenoid D Electrical 17152
P0773 Shift Solenoid E Electrical 17157
P0790 Normal/Performance Switch Circ Malfunction 17174

P1101 O2 Sensor Circ.,Bank1-Sensor1Voltage too Low/Air Leak 17509
P1102 O2 Sensor Heating Circ.,Bank1-Sensor1 Short to B+ 17510
P1103 O2 Sensor Heating Circ.,Bank1-Sensor1 Output too Low 17511
P1104 Bank1-Sensor2 Voltage too Low/Air Leak 17512
P1105 O2 Sensor Heating Circ.,Bank1-Sensor2 Short to B+ 17513
P1106 O2 Sensor Circ.,Bank2-Sensor1 Voltage too Low/Air Leak 17514
P1107 O2 Sensor Heating Circ.,Bank2-Sensor1 Short to B+ 17515
P1108 O2 Sensor Heating Circ.,Bank2-Sensor1 Output too Low 17516
P1109 O2 Sensor Circ.,Bank2-Sensor2 Voltage too Low/Air Leak 17517
P1110 O2 Sensor Heating Circ.,Bank2-Sensor2 Short to B+ 17518
P1111 O2 Control (Bank 1) System too lean 17519
P1112 O2 Control (Bank 1) System too rich 17520
P1113 Bank1-Sensor1 Internal Resistance too High 17521
P1114 Bank1-Sensor2 Internal Resistant too High 17522
P1115 O2 Sensor Heater Circ.,Bank1-Sensor1 Short to Ground 17523
P1116 O2 Sensor Heater Circ.,Bank1-Sensor1 Open 17524
P1117 O2 Sensor Heater Circ.,Bank1-Sensor2 Short to Ground 17525
P1118 O2 Sensor Heater Circ.,Bank1-Sensor2 Open 17526
P1119 O2 Sensor Heater Circ.,Bank2-Sensor1 Short to Ground 17527
P1120 O2 Sensor Heater Circ.,Bank2-Sensor1 Open 17528
P1121 O2 Sensor Heater Circ.,Bank2-Sensor2 Short to Ground 17529
P1122 O2 Sensor Heater Circ.,Bank2-Sensor2 Open 17530
P1123 Long Term Fuel Trim Add.Air.,Bank1 System too Rich 17531
P1124 Long Term Fuel Trim Add.Air.,Bank1 System too Lean 17532
P1125 Long Term Fuel Trim Add.Air.,Bank2 System too Rich 17533
P1126 Long Term Fuel Trim Add.Air.,Bank2 System too Lean 17534
P1127 Long Term Fuel Trim mult.,Bank1 System too Rich 17535
P1128 Long Term Fuel Trim mult.,Bank1 System too Lean 17536
P1129 Long Term Fuel Trim mult.,Bank2 System too Rich 17537
P1130 Long Term Fuel Trim mult.,Bank2 System too Lean 17538
P1131 Bank2-Sensor1 Internal Rsistance too High 17539
P1132 O2 Sensor Heating Circ.,Bank1+2-Sensor1 Short to B+ 17540
P1133 O2 Sensor Heating Circ.,Bank1+2-Sensor1 Electrical Malfunction 17541
P1134 O2 Sensor Heating Circ.,Bank1+2-Sensor2 Short to B+ 17542
P1135 O2 Sensor Heating Circ.,Bank1+2-Sensor2 Electrical Malfunction 17543
P1136 Long Term Fuel Trim Add.Fuel,Bank1 System too Lean 17544
P1137 Long Term Fuel Trim Add.Fuel,Bank1 System too Rich 17545
P1138 Long Term Fuel Trim Add.Fuel,Bank2 System too Lean 17546
P1139 Long Term Fuel Trim Add.Fuel,Bank2 System too Rich 17547
P1140 Bank2-Sensor2 Internal Resistance too High 17548
P1141 Load Calculation Cross Check Range/Performance 17549
P1142 Load Calculation Cross Check Lower Limit Exceeded 17550
P1143 Load Calculation Cross Check Upper Limit Exceeded 17551
P1144 Mass or Volume Air Flow Circ Open/Short to Ground 17552

P1145 Mass or Volume Air Flow Circ Short to B+ 17553
P1146 Mass or Volume Air Flow Circ Supply Malfunction 17554
P1147 O2 Control (Bank 2) System too lean 17555
P1148 O2 Control (Bank 2) System too rich 17556
P1149 O2 Control (Bank 1) Out of range 17557
P1150 O2 Control (Bank 2) Out of range 17558
P1151 Bank1, Long Term Fuel Trim, Range 1 Leanness Lower Limit Exceeded 17559
P1152 Bank1, Long Term Fuel Trim, Range 2 Leanness Lower Limit Exceeded 17560
P1154 Manifold Switch Over Malfunction 17562
P1155 Manifold Abs.Pressure Sensor Circ. Short to B+ 17563
P1156 Manifold Abs.Pressure Sensor Circ. Open/Short to Ground 17564
P1157 Manifold Abs.Pressure Sensor Circ. Power Supply Malfunction 17565
P1158 Manifold Abs.Pressure Sensor Circ. Range/Performance 17566
P1160 Manifold Temp.Sensor Circ. Short to Ground 17568
P1161 Manifold Temp.Sensor Circ. Open/Short to B+ 17569
P1162 Fuel Temp.Sensor Circ. Short to Ground 17570
P1163 Fuel Temp.Sensor Circ. Open/Short to B+ 17571
P1164 Fuel Temperature Sensor Range/Performance/Incorrect Signal 17572
P1165 Bank1, Long Term Fuel Trim, Range 1 Rich Limit Exceeded 17573
P1166 Bank1, Long Term Fuel Trim, Range 2 Rich Limit Exceeded 17574
P1171 Throttle Actuation Potentiometer Sign.2 Range/Performance 17579
P1172 Throttle Actuation Potentiometer Sign.2 Signal too Low 17580
P1173 Throttle Actuation Potentiometer Sign.2 Signal too High 17581
P1174 Fuel Trim, Bank 1 Different injection times 17582
P1176 O2 Correction Behind Catalyst,B1 Limit Attained 17584
P1177 O2 Correction Behind Catalyst,B2 Limit Attained 17585
P1178 Linear O2 Sensor / Pump Current Open Circuit 17586
P1179 Linear O2 Sensor / Pump Current Short to ground 17587
P1180 Linear O2 Sensor / Pump Current Short to B+ 17588
P1181 Linear O2 Sensor / Reference Voltage Open Circuit 17589
P1182 Linear O2 Sensor / Reference Voltage Short to ground 17590
P1183 Linear O2 Sensor / Reference Voltage Short to B+ 17591
P1184 Linear O2 Sensor / Common Ground Wire Open Circuit 17592
P1185 Linear O2 Sensor / Common Ground Wire Short to ground 17593
P1186 Linear O2 Sensor / Common Ground Wire Short to B+ 17594
P1187 Linear O2 Sensor / Compens. Resistor Open Circuit 17595
P1188 Linear O2 Sensor / Compens. Resistor Short to ground 17596
P1189 Linear O2 Sensor / Compens. Resistor Short to B+ 17597
P1190 Linear O2 Sensor / Reference Voltage Incorrect Signal 17598
P1196 O2 Sensor Heater Circ.,Bank1-Sensor1 Electrical Malfunction 17604
P1197 O2 Sensor Heater Circ.,Bank2-Sensor1 Electrical Malfunction 17605
P1198 O2 Sensor Heater Circ.,Bank1-Sensor2 Electrical Malfunction 17606
P1199 O2 Sensor Heater Circ.,Bank2-Sensor2 Electrical Malfunction 17607

P1201 Cyl.1-Fuel Inj.Circ. Electrical Malfunction 17609
P1202 Cyl.2-Fuel Inj.Circ. Electrical Malfunction 17610
P1203 Cyl.3-Fuel Inj.Circ. Electrical Malfunction 17611
P1204 Cyl.4-Fuel Inj.Circ. Electrical Malfunction 17612
P1205 Cyl.5-Fuel Inj.Circ. Electrical Malfunction 17613
P1206 Cyl.6-Fuel Inj.Circ. Electrical Malfunction 17614
P1207 Cyl.7-Fuel Inj.Circ. Electrical Malfunction 17615
P1208 Cyl.8-Fuel Inj.Circ. Electrical Malfunction 17616
P1209 Intake valves for cylinder shut-off Short circuit to ground 17617
P1210 Intake valves for cylinder shut-off Short to B+ 17618
P1211 Intake valves for cylinder shut-off Open circuit 17619
P1213 Cyl.1-Fuel Inj.Circ. Short to B+ 17621
P1214 Cyl.2-Fuel Inj.Circ. Short to B+ 17622
P1215 Cyl.3-Fuel Inj.Circ. Short to B+ 17623
P1216 Cyl.4-Fuel Inj.Circ. Short to B+ 17624
P1217 Cyl.5-Fuel Inj.Circ. Short to B+ 17625
P1218 Cyl.6-Fuel Inj.Circ. Short to B+ 17626

P1219 Cyl.7-Fuel Inj.Circ. Short to B+ 17627
P1220 Cyl.8-Fuel Inj.Circ. Short to B+ 17628
P1221 Cylinder shut-off exhaust valves Short circuit to ground 17629
P1222 Cylinder shut-off exhaust valves Short to B+ 17630
P1223 Cylinder shut-off exhaust valves Open circuit 17631
P1225 Cyl.1-Fuel Inj.Circ. Short to Ground 17633
P1226 Cyl.2-Fuel Inj.Circ. Short to Ground 17634
P1227 Cyl.3-Fuel Inj.Circ. Short to Ground 17635
P1228 Cyl.4-Fuel Inj.Circ. Short to Ground 17636
P1229 Cyl.5-Fuel Inj.Circ. Short to Ground 17637
P1230 Cyl.6-Fuel Inj.Circ. Short to Ground 17638
P1231 Cyl.7-Fuel Inj.Circ. Short to Ground 17639
P1232 Cyl.8-Fuel Inj.Circ. Short to Ground 17640
P1237 Cyl.1-Fuel Inj.Circ. Open Circ. 17645
P1238 Cyl.2-Fuel Inj.Circ. Open Circ. 17646
P1239 Cyl.3-Fuel Inj.Circ. Open Circ. 17647
P1240 Cyl.4-Fuel Inj.Circ. Open Circ. 17648
P1241 Cyl.5-Fuel Inj.Circ. Open Circ. 17649
P1242 Cyl.6-Fuel Inj.Circ. Open Circ. 17650
P1243 Cyl.7-Fuel Inj.Circ. Open Circ. 17651
P1244 Cyl.8-Fuel Inj.Circ. Open Circ. 17652
P1245 Needle Lift Sensor Circ. Short to Ground 17653
P1246 Needle Lift Sensor Circ. Range/Performance 17654
P1247 Needle Lift Sensor Circ. Open/Short to B+ 17655
P1248 Injection Start Control Deviation 17656
P1249 Fuel consumption signal Electrical Fault in Circuit 17657
P1250 Fuel Level Too Low 17658
P1251 Start of Injection Solenoid Circ Short to B+ 17659
P1252 Start of Injection Solenoid Circ Open/Short to Ground 17660
P1253 Fuel consumption signal Short to ground 17661
P1254 Fuel consumption signal Short to B+ 17662
P1255 Engine Coolant Temp.Circ Short to Ground 17663
P1256 Engine Coolant Temp.Circ Open/Short to B+ 17664
P1257 Engine Coolant System Valve Open 17665
P1258 Engine Coolant System Valve Short to B+ 17666
P1259 Engine Coolant System Valve Short to Ground 17667
P1280 Fuel Inj.Air Contr.Valve Circ. Flow too Low 17688
P1283 Fuel Inj.Air Contr.Valve Circ. Electrical Malfunction 17691
P1284 Fuel Inj.Air Contr.Valve Circ. Open 17692
P1285 Fuel Inj.Air Contr.Valve Circ. Short to Ground 17693
P1286 Fuel Inj.Air Contr.Valve Circ. Short to B+ 17694
P1287 Turbocharger bypass valve open 17695
P1288 Turbocharger bypass valve short to B+ 17696
P1289 Turbocharger bypass valve short to ground 17697
P1296 Cooling system malfunction 17704
P1297 Connection turbocharger - throttle valve pressure hose 17705

P1300 Misfire detected Reason: Fuel level too low 17708
P1319 Knock Sensor 1 Circ. Short to Ground 17721
P1320 Knock Sensor 2 Circ. Short to Ground 17728
P1321 Knock Sensor 3 Circ. Low Input 17729
P1322 Knock Sensor 3 Circ. High Input 17730
P1323 Knock Sensor 4 Circ. Low Input 17731
P1324 Knock Sensor 4 Circ. High Input 17732
P1325 Cyl.1-Knock Contr. Limit Attained 17733
P1326 Cyl.2-Knock Contr. Limit Attained 17734
P1327 Cyl.3-Knock Contr. Limit Attained 17735
P1328 Cyl.4-Knock Contr. Limit Attained 17736
P1329 Cyl.5-Knock Contr. Limit Attained 17737
P1330 Cyl.6-Knock Contr. Limit Attained 17738
P1331 Cyl.7-Knock Contr. Limit Attained 17739

P1332 Cyl.8-Knock Contr. Limit Attained 17740
P1335 Engine Torque Monitoring 2 Control Limint Exceeded 17743
P1336 Engine Torque Monitoring Adaptation at limit 17744
P1337 Camshaft Pos.Sensor,Bank1 Short to Ground 17745
P1338 Camshaft Pos.Sensor,Bank1 Open Circ./Short to B+ 17746
P1339 Crankshaft Pos./Engine Speed Sensor Cross Connected 17747
P1340 Crankshaft-/Camshaft Pos.Sens.Signals Out of Sequence 17748
P1341 Ignition Coil Power Output Stage 1 Short to Ground 17749
P1342 Ignition Coil Power Output Stage 1 Short to B+ 17750
P1343 Ignition Coil Power Output Stage 2 Short to Ground 17751
P1344 Ignition Coil Power Output Stage 2 Short to B+ 17752
P1345 Ignition Coil Power Output Stage 3 Short to Ground 17753
P1346 Ignition Coil Power Output Stage 3 Short to B+ 17754
P1347 Bank2,Crankshaft-/Camshaft os.Sens.Sign. Out of Sequence 17755
P1348 Ignition Coil Power Output Stage 1 Open Circuit 17756
P1349 Ignition Coil Power Output Stage 2 Open Circuit 17757
P1350 Ignition Coil Power Output Stage 3 Open Circuit 17758
P1354 Modulation Piston Displ.Sensor Circ. Malfunction 17762
P1355 Cyl. 1, ignition circuit Open Circuit 17763
P1356 Cyl. 1, ignition circuit Short to B+ 17764
P1357 Cyl. 1, ignition circuit Short to ground 17765
P1358 Cyl. 2, ignition circuit Open Circuit 17766
P1359 Cyl. 2, ignition circuit Short Circuit to B+ 17767
P1360 Cyl. 2, ignition circuit Short Circuit to Ground 17768
P1361 Cyl. 3, ignition circuit Open Circuit 17769
P1362 Cyl. 3, ignition circuit Short Circuit to B+ 17770
P1363 Cyl. 3, ignition circuit Short Circuit to ground 17771
P1364 Cyl. 4 ignition circuit Open Circuit 17772
P1365 Cyl. 4 ignition circuit Short circuit to B+ 17773
P1366 Cyl. 4 ignition circuit Short circuit to ground 17774
P1367 Cyl. 5, ignition circuit Open Circuit 17775
P1368 Cyl. 5, ignition circuit Short Circuit to B+ 17776
P1369 Cyl. 5, ignition circuit short to ground 17777
P1370 Cyl. 6, ignition circuit Open Circuit 17778
P1371 Cyl. 6, ignition circuit Short Circuit to B+ 17779
P1372 Cyl. 6, ignition circuit short to ground 17780
P1373 Cyl. 7, ignition circuit Open Circuit 17781
P1374 Cyl. 7, ignition circuit Short Circuit to B+ 17782
P1375 Cyl. 7, ignition circuit short to ground 17783
P1376 Cyl. 8, ignition circuit Open Circuit 17784
P1377 Cyl. 8, ignition circuit Short Circuit to B+ 17785
P1378 Cyl. 8, ignition circuit short to ground 17786
P1386 Internal Control Module Knock Control Circ.Error 17794
P1387 Internal Contr. Module altitude sensor error 17795
P1388 Internal Contr. Module drive by wire error 17796
P1391 Camshaft Pos.Sensor,Bank2 Short to Ground 17799
P1392 Camshaft Pos.Sensor,Bank2 Open Circ./Short to B+ 17800
P1393 Ignition Coil Power Output Stage 1 Electrical Malfunction 17801
P1394 Ignition Coil Power Output Stage 2 Electrical Malfunction 17802
P1395 Ignition Coil Power Output Stage 3 Electrical Malfunction 17803
P1396 Engine Speed Sensor Missing Tooth 17804
P1397 Engine speed wheel Adaptation limit reached 17805
P1398 Engine RPM signal, TD Short to ground 17806
P1399 Engine RPM signal, TD Short Circuit to B+ 17807

P1400 EGR Valve Circ Electrical Malfunction 17808
P1401 EGR Valve Circ Short to Ground 17809
P1402 EGR Valve Circ Short to B+ 17810
P1403 EGR Flow Deviation 17811
P1404 EGR Flow Basic Setting not carried out 17812
P1406 EGR Temp.Sensor Range/Performance 17814

P1407 EGR Temp.Sensor Signal too Low 17815
P1408 EGR Temp.Sensor Signal too High 17816
P1409 Tank Ventilation Valve Circ. Electrical Malfunction 17817
P1410 Tank Ventilation Valve Circ. Short to B+ 17818
P1411 Sec.Air Inj.Sys.,Bank2 Flow too Flow 17819
P1412 EGR Different.Pressure Sensor Signal too Low 17820
P1413 EGR Different.Pressure Sensor Signal too High 17821
P1414 Sec.Air Inj.Sys.,Bank2 Leak Detected 17822
P1417 Fuel Level Sensor Circ Signal too Low 17825
P1418 Fuel Level Sensor Circ Signal too High 17826
P1420 Sec.Air Inj.Valve Circ Electrical Malfunction 17828
P1421 Sec.Air Inj.Valve Circ Short to Ground 17829
P1422 Sec.Air Inj.Sys.Contr.Valve Circ Short to B+ 17830
P1423 Sec.Air Inj.Sys.,Bank1 Flow too Low 17831
P1424 Sec.Air Inj.Sys.,Bank1 Leak Detected 17832
P1425 Tank Vent.Valve Short to Ground 17833
P1426 Tank Vent.Valve Open 17834
P1432 Sec.Air Inj.Valve Open 17840
P1433 Sec.Air Inj.Sys.Pump Relay Circ. open 17841
P1434 Sec.Air Inj.Sys.Pump Relay Circ. Short to B+ 17842
P1435 Sec.Air Inj.Sys.Pump Relay Circ. Short to ground 17843
P1436 Sec.Air Inj.Sys.Pump Relay Circ. Electrical Malfunction 17844
P1439 EGR Potentiometer Error in Basic Seting 17847
P1440 EGR Valve Power Stage Open 17848
P1441 EGR Valve Circ Open/Short to Ground 17849
P1442 EGR Valve Position Sensor Signal too high 17850
P1443 EGR Valve Position Sensor Signal too low 17851
P1444 EGR Valve Position Sensor range/performance 17852
P1445 Catalyst Temp.Sensor 2 Circ. Range/Performance 17853
P1446 Catalyst Temp.Circ Short to Ground 17854
P1447 Catalyst Temp.Circ Open/Short to B+ 17855
P1448 Catalyst Temp.Sensor 2 Circ. Short to Ground 17856
P1449 Catalyst Temp.Sensor 2 Circ. Open/Short to B+ 17857
P1450 Sec.Air Inj.Sys.Circ Short to B+ 17858
P1451 Sec.Air Inj.Sys.Circ Short to Ground 17859
P1452 Sec.Air Inj.Sys. Open Circ. 17860
P1453 Exhaust gas temperature sensor 1 open/short to B+ 17861
P1454 Exhaust gas temperature sensor short 1 to ground 17862
P1455 Exhaust gas temperature sensor 1 range/performance 17863
P1456 Exhaust gas temperature control bank 1 limit attained 17864
P1457 Exhaust gas temperature sensor 2 open/short to B+ 17865
P1458 Exhaust gas temperature sensor 2 short to ground 17866
P1459 Exhaust gas temperature sensor 2 range/performance 17867
P1460 Exhaust gas temperature control bank 2 limit attained 17868
P1461 Exhaust gas temperature control bank 1 Range/Performance 17869
P1462 Exhaust gas temperature control bank 2 Range/Performance 17870
P1465 Additive Pump Short Circuit to B+ 17873
P1466 Additive Pump Open/Short to Ground 17874
P1467 EVAP Canister Purge Solenoid Valve Short Circuit to B+ 17875
P1468 EVAP Canister Purge Solenoid Valve Short Circuit to Ground 17876
P1469 EVAP Canister Purge Solenoid Valve Open Circuit 17877
P1470 EVAP Emission Contr.LDP Circ Electrical Malfunction 17878
P1471 EVAP Emission Contr.LDP Circ Short to B+ 17879
P1472 EVAP Emission Contr.LDP Circ Short to Ground 17880
P1473 EVAP Emission Contr.LDP Circ Open Circ. 17881
P1474 EVAP Canister Purge Solenoid Valve electrical malfunction 17882
P1475 EVAP Emission Contr.LDP Circ Malfunction/Signal Circ.Open 17883
P1476 EVAP Emission Contr.LDP Circ Malfunction/Insufficient Vacuum 17884
P1477 EVAP Emission Contr.LDP Circ Malfunction 17885
P1478 EVAP Emission Contr.LDP Circ Clamped Tube Detected 17886

P1500 Fuel Pump Relay Circ. Electrical Malfunction 17908
P1501 Fuel Pump Relay Circ. Short to Ground 17909
P1502 Fuel Pump Relay Circ. Short to B+ 17910
P1503 Load signal from Alternator Term. DF Range/performance/Incorrect Signal
17911
P1504 Intake Air Sys.Bypass Leak Detected 17912
P1505 Closed Throttle Pos. Does Not Close/Open Circ 17913
P1506 Closed Throttle Pos.Switch Does Not Open/Short to Ground 17914
P1507 Idle Sys.Learned Value Lower Limit Attained 17915
P1508 Idle Sys.Learned Value Upper Limit Attained 17916
P1509 Idle Air Control Circ. Electrical Malfunction 17917
P1510 Idle Air Control Circ. Short to B+ 17918
P1511 Intake Manifold Changeover Valve circuit electrical malfunction 17919
P1512 Intake Manifold Changeover Valve circuit Short to B+ 17920
P1513 Intake Manifold Changeover Valve2 circuit Short to B+ 17921
P1514 Intake Manifold Changeover Valve2 circuit Short to ground 17922
P1515 Intake Manifold Changeover Valve circuit Short to Ground 17923
P1516 Intake Manifold Changeover Valve circuit Open 17924
P1517 Main Relay Circ. Electrical Malfunction 17925
P1518 Main Relay Circ. Short to B+ 17926
P1519 Intake Camshaft Contr.,Bank1 Malfunction 17927
P1520 Intake Manifold Changeover Valve2 circuit Open 17928
P1521 Intake Manifold Changeover Valve2 circuit electrical malfunction 17929
P1522 Intake Camshaft Contr.,Bank2 Malfunction 17930
P1523 Crash Signal from Airbag Control Unit range/performance 17931
P1525 Intake Camshaft Contr.Circ.,Bank1 Electrical Malfunction 17933
P1526 Intake Camshaft Contr.Circ.,Bank1 Short to B+ 17934
P1527 Intake Camshaft Contr.Circ.,Bank1 Short to Ground 17935
P1528 Intake Camshaft Contr.Circ.,Bank1 Open 17936
P1529 Camshaft Control Circuit Short to B+ 17937
P1530 Camshaft Control Circuit Short to ground 17938
P1531 Camshaft Control Circuit open 17939
P1533 Intake Camshaft Contr.Circ.,Bank2 Electrical Malfunction 17941
P1534 Intake Camshaft Contr.Circ.,Bank2 Short to B+ 17942
P1535 Intake Camshaft Contr.Circ.,Bank2 Short to Ground 17943
P1536 Intake Camshaft Contr.Circ.,Bank2 Open 17944
P1537 Engine Shutoff Solenoid Malfunction 17945
P1538 Engine Shutoff Solenoid Open/Short to Ground 17946
P1539 Clutch Vacuum Vent Valve Switch Incorrect signal 17947
P1540 Vehicle Speed Sensor High Input 17948
P1541 Fuel Pump Relay Circ Open 17949
P1542 Throttle Actuation Potentiometer Range/Performance 17950
P1543 Throttle Actuation Potentiometer Signal too Low 17951
P1544 Throttle Actuation Potentiometer Signal too High 17952
P1545 Throttle Pos.Contr Malfunction 17953
P1546 Boost Pressure Contr.Valve Short to B+ 17954
P1547 Boost Pressure Contr.Valve Short to Ground 17955
P1548 Boost Pressure Contr.Valve Open 17956
P1549 Boost Pressure Contr.Valve Short to Ground 17957
P1550 Charge Pressure Deviation 17958
P1551 Barometric Pressure Sensor Circ. Short to B+ 17959
P1552 Barometric Pressure Sensor Circ. Open/Short to Ground 17960
P1553 Barometric/manifold pressure signal ratio out of range 17961
P1554 Idle Speed Contr.Throttle Pos. Basic Setting Conditions not met 17962
P1555 Charge Pressure Upper Limit exceeded 17963
P1556 Charge Pressure Contr. Negative Deviation 17964
P1557 Charge Pressure Contr. Positive Deviation 17965
P1558 Throttle Actuator Electrical Malfunction 17966
P1559 Idle Speed Contr.Throttle Pos. Adaptation Malfunction 17967
P1560 Maximum Engine Speed Exceeded 17968
P1561 Quantity Adjuster Deviation 17969

P1562 Quantity Adjuster Upper Limit Attained 17970
P1563 Quantity Adjuster Lower Limit Attained 17971
P1564 Idle Speed Contr.Throttle Pos. Low Voltage During Adaptation 17972
P1565 Idle Speed Control Throttle Position lower limit not attained 17973
P1566 Load signal from A/C compressor range/performance 17974
P1567 Load signal from A/C compressor no signal 17975
P1568 Idle Speed Contr.Throttle Pos. mechanical Malfunction 17976
P1569 Cruise control switch Incorrect signal 17977
P1570 Contr.Module Locked 17978
P1571 Left Eng. Mount Solenoid Valve Short to B+ 17979
P1572 Left Eng. Mount Solenoid Valve Short to ground 17980
P1573 Left Eng. Mount Solenoid Valve Open circuit 17981
P1574 Left Eng. Mount Solenoid Valve Electrical fault in circuit 17982
P1575 Right Eng. Mount Solenoid Valve Short to B+ 17983
P1576 Right Eng. Mount Solenoid Valve Short to ground 17984
P1577 Right Eng. Mount Solenoid Valve Open circuit 17985
P1578 Right Eng. Mount Solenoid Valve Electrical fault in circuit 17986
P1579 Idle Speed Contr.Throttle Pos. Adaptation not started 17987
P1580 Throttle Actuator B1 Malfunction 17988
P1581 Idle Speed Contr.Throttle Pos. Basic Setting Not Carried Out 17989
P1582 Idle Adaptation at Limit 17990
P1583 Transmission mount valves Short to B+ 17991
P1584 Transmission mount valves Short to ground 17992
P1585 Transmission mount valves Open circuit 17993
P1586 Engine mount solenoid valves Short to B+ 17994
P1587 Engine mount solenoid valves Short to ground 17995
P1588 Engine mount solenoid valves Open circuit 17996

P1600 Power Supply (B+) Terminal 15 Low Voltage 18008
P1602 Power Supply (B+) Terminal 30 Low Voltage 18010
P1603 Internal Control Module Malfunction 18011
P1604 Internal Control Module Driver Error 18012
P1605 Rough Road/Acceleration Sensor Electrical Malfunction 18013
P1606 Rough Road Spec Engine Torque ABS-ECU Electrical Malfunction 18014
P1607 Vehicle speed signal Error message from instrument cluster 18015
P1608 Steering angle signal Error message from steering angle sensor 18016
P1609 Crash shut-down activated 18017
P1611 MIL Call-up Circ./Transm.Contr.Module Short to Ground 18019
P1612 Electronic Control Module Incorrect Coding 18020
P1613 MIL Call-up Circ Open/Short to B+ 18021
P1614 MIL Call-up Circ./Transm.Contr.Module Range/Performance 18022
P1615 Engine Oil Temperature Sensor Circuit range/performance 18023
P1616 Glow Plug/Heater Indicator Circ. Short to B+ 18024
P1617 Glow Plug/Heater Indicator Circ. Open/Short to Ground 18025
P1618 Glow Plug/Heater Relay Circ. Short to B+ 18026
P1619 Glow Plug/Heater Relay Circ. Open/Short to Ground 18027
P1620 Engine coolant temperature signal open/short to B+ 18028
P1621 Engine coolant temperature signal short to ground 18029
P1622 Engine coolant temperature signal range/performance 18030
P1623 Data Bus Powertrain No Communication 18031
P1624 MIL Request Sign.active 18032
P1625 Data-Bus Powertrain Unplausible Message from Transm.Contr. 18033
P1626 Data-Bus Powertrain Missing Message from Transm.Contr. 18034
P1627 Data-Bus Powertrain missing message from fuel injection pump 18035
P1628 Data-Bus Powertrain missing message from steering sensor 18036
P1629 Data-Bus Powertrain missing message from distance control 18037
P1630 Accelera.Pedal Pos.Sensor 1 Signal too Low 18038
P1631 Accelera.Pedal Pos.Sensor 1 Signal too High 18039
P1632 Accelera.Pedal Pos.Sensor 1 Power Supply Malfunction 18040
P1633 Accelera.Pedal Pos.Sensor 2 Signal too Low 18041
P1634 Accelera.Pedal Pos.Sensor 2 Signal too High 18042

P1635 Data Bus Powertrain missing message f.air condition control 18043
P1636 Data Bus Powertrain missing message from Airbag control 18044
P1637 Data Bus Powertrain missing message f.central electr.control 18045
P1638 Data Bus Powertrain missing message from clutch control 18046
P1639 Accelera.Pedal Pos.Sensor 1+2 Range/Performance 18047
P1640 Internal Contr.Module (EEPROM) Error 18048
P1641 Please check DTC Memory of Air Condition ECU 18049
P1642 Please check DTC Memory of Airbag ECU 18050
P1643 Please check DTC Memory of central electric ECU 18051
P1644 Please check DTC Memory of clutch ECU 18052
P1645 Data Bus Powertrain missing message f.all wheel drive contr. 18053
P1646 Please Check DTC Memory of all wheel drive ECU 18054
P1647 Please check coding of ECUs in Data Bus Powertrain 18055
P1648 Data Bus Powertrain Malfunction 18056
P1649 Data Bus Powertrain Missing message from ABS Control Module 18057
P1650 Data Bus Powertrain Missing message fr.instrument panel ECU 18058
P1651 Data Bus Powertrain missing messages 18059
P1652 Please check DTC Memory of transmission ECU 18060
P1653 Please check DTC Memory of ABS Control Module 18061
P1654 Please check DTC Memory of control panel ECU 18062
P1655 Please check DTC Memory of ADR Control Module 18063
P1656 A/C clutch relay circuit short to ground 18064
P1657 A/C clutch relay circuit short to B+ 18065
P1658 Data Bus Powertrain Incorrect signal from ADR Control Module 18066
P1676 Drive by Wire-MIL Circ. Electrical Malfunction 18084
P1677 Drive by Wire-MIL Circ. Short to B+ 18085
P1678 Drive by Wire-MIL Circ. Short to Ground 18086
P1679 Drive by Wire-MIL Circ. Open 18087
P1681 Contr.Unit Programming, Programming not Finished 18089
P1684 Contr.Unit Programming Communication Error 18092
P1686 Contr.Unit Error Programming Error 18094
P1690 Malfunction Indication Light Malfunction 18098
P1691 Malfunction Indication Light Open 18099
P1692 Malfunction Indication Light Short to Ground 18100
P1693 Malfunction Indication Light Short to B+ 18101
P1694 Malfunction Indication Light Open/Short to Ground 18102

P1704 Kick Down Switch Malfunction 18112
P1705 Gear/Ratio Monitoring Adaptation limit reached 18113
P1711 Wheel Speed Signal 1 Range/Performance 18119
P1716 Wheel Speed Signal 2 Range/Performance 18124
P1721 Wheel Speed Signal 3 Range/Performance 18129
P1723 Starter Interlock Circ. Open 18131
P1724 Starter Interlock Circ. Short to Ground 18132
P1726 Wheel Speed Signal 4 Range/Performance 18134
P1728 Different Wheel Speed Signals Range/Performance 18136
P1729 Starter Interlock Circ. Short to B+ 18137
P1733 Tiptronic Switch Down Circ. Short to Ground 18141
P1739 Tiptronic Switch up Circ. Short to Ground 18147
P1740 Clutch temperature control 18148
P1741 Clutch pressure adaptation at limit 18149
P1742 Clutch torque adaptation at limit 18150
P1743 Clutch slip control signal too high 18151
P1744 Tiptronic Switch Recognition Circ. Short to Ground 18152
P1745 Transm.Contr.Unit Relay Short to B+ 18153
P1746 Transm.Contr.Unit Relay Malfunction 18154
P1747 Transm.Contr.Unit Relay Open/Short to Ground 18155
P1748 Transm.Contr.Unit Self-Check 18156
P1749 Transm.Contr.Unit Incorrect Coded 18157
P1750 Power Supply Voltage Low Voltage 18158
P1751 Power Supply Voltage High Voltage 18159

P1752 Power Supply Malfunction 18160
P1760 Shift Lock Malfunction 18168
P1761 Shift Lock Short to Ground 18169
P1762 Shift Lock Short to B+ 18170
P1763 Shift Lock Open 18171
P1764 Transmission temperature control 18172
P1765 Hydraulic Pressure Sensor 2 adaptation at limit 18173
P1766 Throttle Angle Signal Stuck Off 18174
P1767 Throttle Angle Signal Stuck On 18175
P1768 Hydraulic Pressure Sensor 2 Too High 18176
P1769 Hydraulic Pressure Sensor 2 Too Low 18177
P1770 Load Signal Range/Performance 18178
P1771 Load Signal Stuck Off 18179
P1772 Load Signal Stuck On 18180
P1773 Hydraulic Pressure Sensor 1 Too High 18181
P1774 Hydraulic Pressure Sensor 1 Too Low 18182
P1775 Hydraulic Pressure Sensor 1 adaptation at limit 18183
P1776 Hydraulic Pressure Sensor 1 range/performance 18184
P1777 Hydraulic Pressure Sensor 2 range/performance 18185
P1778 Solenoid EV7 Electrical Malfunction 18186
P1781 Engine Torque Reduction Open/Short to Ground 18189
P1782 Engine Torque Reduction Short to B+ 18190
P1784 Shift up/down Wire Open/Short to Ground 18192
P1785 Shift up/down Wire Short to B+ 18193
P1786 Reversing Light Circ. Open 18194
P1787 Reversing Light Circ. Short to Ground 18195
P1788 Reversing Light Circ. Short to B+ 18196
P1789 Idle Speed Intervention Circ. Error Message from Engine Contr. 18197
P1790 Transmission Range Display Circ. Open 18198
P1791 Transmission Range Display Circ. Short to Ground 18199
P1792 Transmission Range Display Circ. Short to B+ 18200
P1793 Output Speed Sensor 2 Circ. No Signal 18201
P1795 Vehicle Speed Signal Circ. Open 18203
P1796 Vehicle Speed Signal Circ. Short to Ground 18204
P1797 Vehicle Speed Signal Circ. Short to B+ 18205
P1798 Output Speed Sensor 2 Circ. Range/Performance 18206
P1799 Output Speed Sensor 2 Circ. Rpm too High 18207

P1813 Pressure Contr.Solenoid 1 Electrical 18221
P1814 Pressure Contr.Solenoid 1 Open/Short to Ground 18222
P1815 Pressure Contr.Solenoid 1 Short to B+ 18223
P1818 Pressure Contr.Solenoid 2 Electrical 18226
P1819 Pressure Contr.Solenoid 2 Open/Short to Ground 18227
P1820 Pressure Contr.Solenoid 2 Short to B+ 18228
P1823 Pressure Contr.Solenoid 3 Electrical 18231
P1824 Pressure Contr.Solenoid 3 Open/Short to Ground 18232
P1825 Pressure Contr.Solenoid 3 Short to B+ 18233
P1828 Pressure Contr.Solenoid 4 Electrical 18236
P1829 Pressure Contr.Solenoid 4 Open/Short to Ground 18237
P1830 Pressure Contr.Solenoid 4 Short to B+ 18238
P1834 Pressure Contr.Solenoid 5 Open/Short to Ground 18242
P1835 Pressure Contr.Solenoid 5 Short to B+ 18243
P1841 Engine/Transmission Control Modules Versions do not match 18249
P1842 Please check DTC Memory of instrument panel ECU 18250
P1843 Please check DTC Memory of ADR Control Module 18251
P1844 Please check DTC Memory of central electric control ECU 18252
P1847 Please check DTC Memory of brake system ECU 18255
P1848 Please check DTC Memory of engine ECU 18256
P1849 Please check DTC Memory of transmission ECU 18257
P1850 Data-Bus Powertrain Missing Message from Engine Contr. 18258
P1851 Data-Bus Powertrain Missing Message from Brake Contr. 18259

P1852 Data-Bus Powertrain Unplausible Message from Engine Contr. 18260
P1853 Data-Bus Powertrain Unplausible Message from Brake Contr. 18261
P1854 Data-Bus Powertrain Hardware Defective 18262
P1855 Data-Bus Powertrain Software version Contr. 18263
P1856 Throttle/Pedal Pos.Sensor A Circ. Error Message from Engine Contr. 18264
P1857 Load Signal Error Message from Engine Contr. 18265
P1858 Engine Speed Input Circ. Error Message from Engine Contr. 18266
P1859 Brake Switch Circ. Error Message from Engine Contr. 18267
P1860 Kick Down Switch Error Message from Engine Contr. 18268
P1861 Throttle Position (TP) sensor Error Message from ECM 18269
P1862 Data Bus Powertrain Missing message from instr. panel ECU 18270
P1863 Data Bus Powertrain Missing Message from St. Angle Sensor 18271
P1864 Data Bus Powertrain Missing message from ADR control module 18272
P1865 Data Bus Powertrain Missing message from central electronics 18273
P1866 Data Bus Powertrain Missing messages 18274



www.ototest.net

GÜNCEL TÜRKÇE OBD II ARIZA KODLARI
TEKNİK BİLGİLER
ARIZA TESPİT CİHAZLARI